

# iT500 System QUICK GUIDE

Should you need to locate the STA number for your iT500, it can be found within the battery compartment of the thermostat.



Why not make a note of your STA number here for future reference.

S T A [ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ] - [ ] [ ]

Remove the batteries from your iT500 thermostat to reveal your unique STA number.

## Temporary override of your temperature

Press the power button to start and use the buttons indicated to change the SET temperature. Then press the tick to accept.



The operations described here can also be controlled via your Smartphone or PC.




Press to cancel temporary override.



Note: Status has been added.

The unit will return to the home screen with the symbol showing.

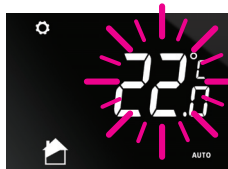


All changes made locally on the iT500 will automatically update PC and Smartphone.

## Switching your heating from AUTO to OFF

Press the power button to start and use the buttons indicated to switch from AUTO to OFF.



The unit will return to the home screen.





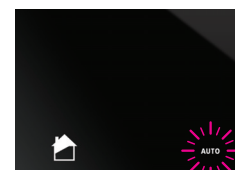


## Viewing or changing your program schedule

At any time press and hold for 5 seconds to return to the home screen.




- A 12345-67
- B 1234567
- C 1-2-3-4-5-6-7

- A Program for Monday to Friday and program for Sat/Sun
- B All week programmer
- C Individual day programming

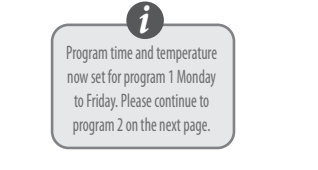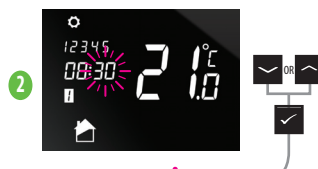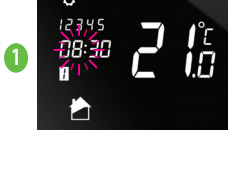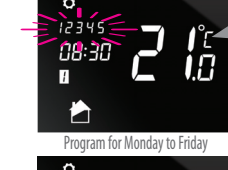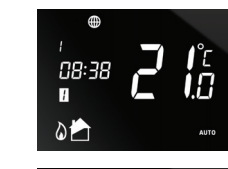

Program time and temperature now set for program 1 Monday to Friday. Please continue to program 2 on the next page.

Continually pressing will keep the screen on continually.

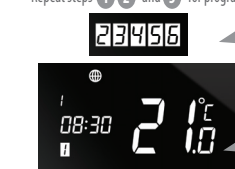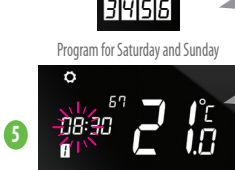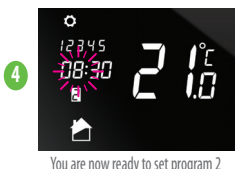

You are now ready to set program 2 Repeat steps 1 2 and 3 for program

3456

Program for Saturday and Sunday

Repeat steps 1 2 and 3 for program

23456

All programs now set

## Useful information

### Exiting Holiday Mode

To exit holiday mode, press and hold the  button.



 You can only activate holiday function via the Web App and Smartphone App.

### Cancel Temporary Override

To cancel temporary override of set temperature press and hold .



### Lock Function

To enable or disable lock function press  and  together.



### Exiting Energy Mode


To enter or exit energy mode, press and hold the  button.





# iT500 - Receiver PAIRING & LIGHT CODES




## Pairing the receiver with the iT500 thermostat


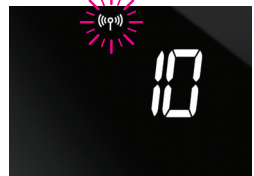

It is unlikely, but if you are experiencing problems, you may need to re-pair your boiler receiver with the iT500. In this event, please follow steps 1-3 below:

- 1 

Using a paper clip, insert into the hole marked SYNC at the bottom of the iT500RX Receiver.
- 2 

The bottom switch will show a constant red light when the iT500RX Receiver is ready to pair.
- 3 

 + 
- 4 


- 5 
- 6 

When the iT500RX Receiver and the iT500 Thermostat are powered and paired then the light will go green.

## What do the lights mean?

The lights on the front of the receiver will change from time to time.



A flashing blue light indicates a call from the iT500 thermostat to the receiver for heat/hot water.



A constant orange light indicates that the receiver has lost RF signal and entered FAILSAFE MODE. In this event, your system will be switched on for 4 minutes, then off for 11 minutes. If you want to disable FAILSAFE MODE when RF link has been lost then move the slide switch on the receiver to either the manual or off position.

If you are having problems or wanting more information on your iT500 system, please visit our website or call our technical helpline.

[www.salus-tech.com](http://www.salus-tech.com)  
Helpline 01226 323961